

10PWS1100G



POS.	PARTS NAME
1	DISCHARGE
2	LOWER VALVE SEAT RETAINER
4	VALVE CONE
5	UPPER VALVE SEAT RETAINER
11	TOP DIFFUSER
12	MIDDLE DIFFUSER
18	IMPELLER
19	RING OF IMPELLER
21	SPLIT CONE
22	SPLIT CONE NUT
23	LOCK FOR STRAINER
26	SPACING WASHER FOR STOP RING
34	STRAINER
35	LOCK FOR STRAINER
36	SUCTION INTERCONNECTOR
37	PUMP SHAFT
44	COUPLING
52	CABLE GUARD
86	VALVE SEAT
87	NECK RING
88	NUT
89	BEARING
90	BEARING
91	SCREW
92	KEY
93	O-RING
94	O-RING
95	SPRING
96	SCREW
98	SPRING WASHER

