

# 6PWS300G

POS.	PARTS NAME
1	DISCHARGE
4	VALVE CONE
11	TOP DIFFUSER
12	DIFFUSER
17	DIFFUSER BEARING CAP
18	IMPELLER
19	RING OF IMPELLER
21	SPLIT CONE
22	SPLIT CONE NUT
23	NUT FOR STOP RING
24	STOP RING
26	SPACING WASHER FOR STOP RING
28	BOTTOM DIFFUSER
31	BOTTOM NECK RING
32	KNECK RING RETAINER
33	STRAINER CAP
34	STRAINER
36	SUCTION INTERCONNECTOR
37	PUMP SHAFT
44	COUPLING
47	STRAP
52	CABLE GUARD
86	VALVE SEAT
87	NECK RING
88	NUT
89	BEARING
90	BEARING
91	SCREW
92	KEY

